


Iron Screw

Cam

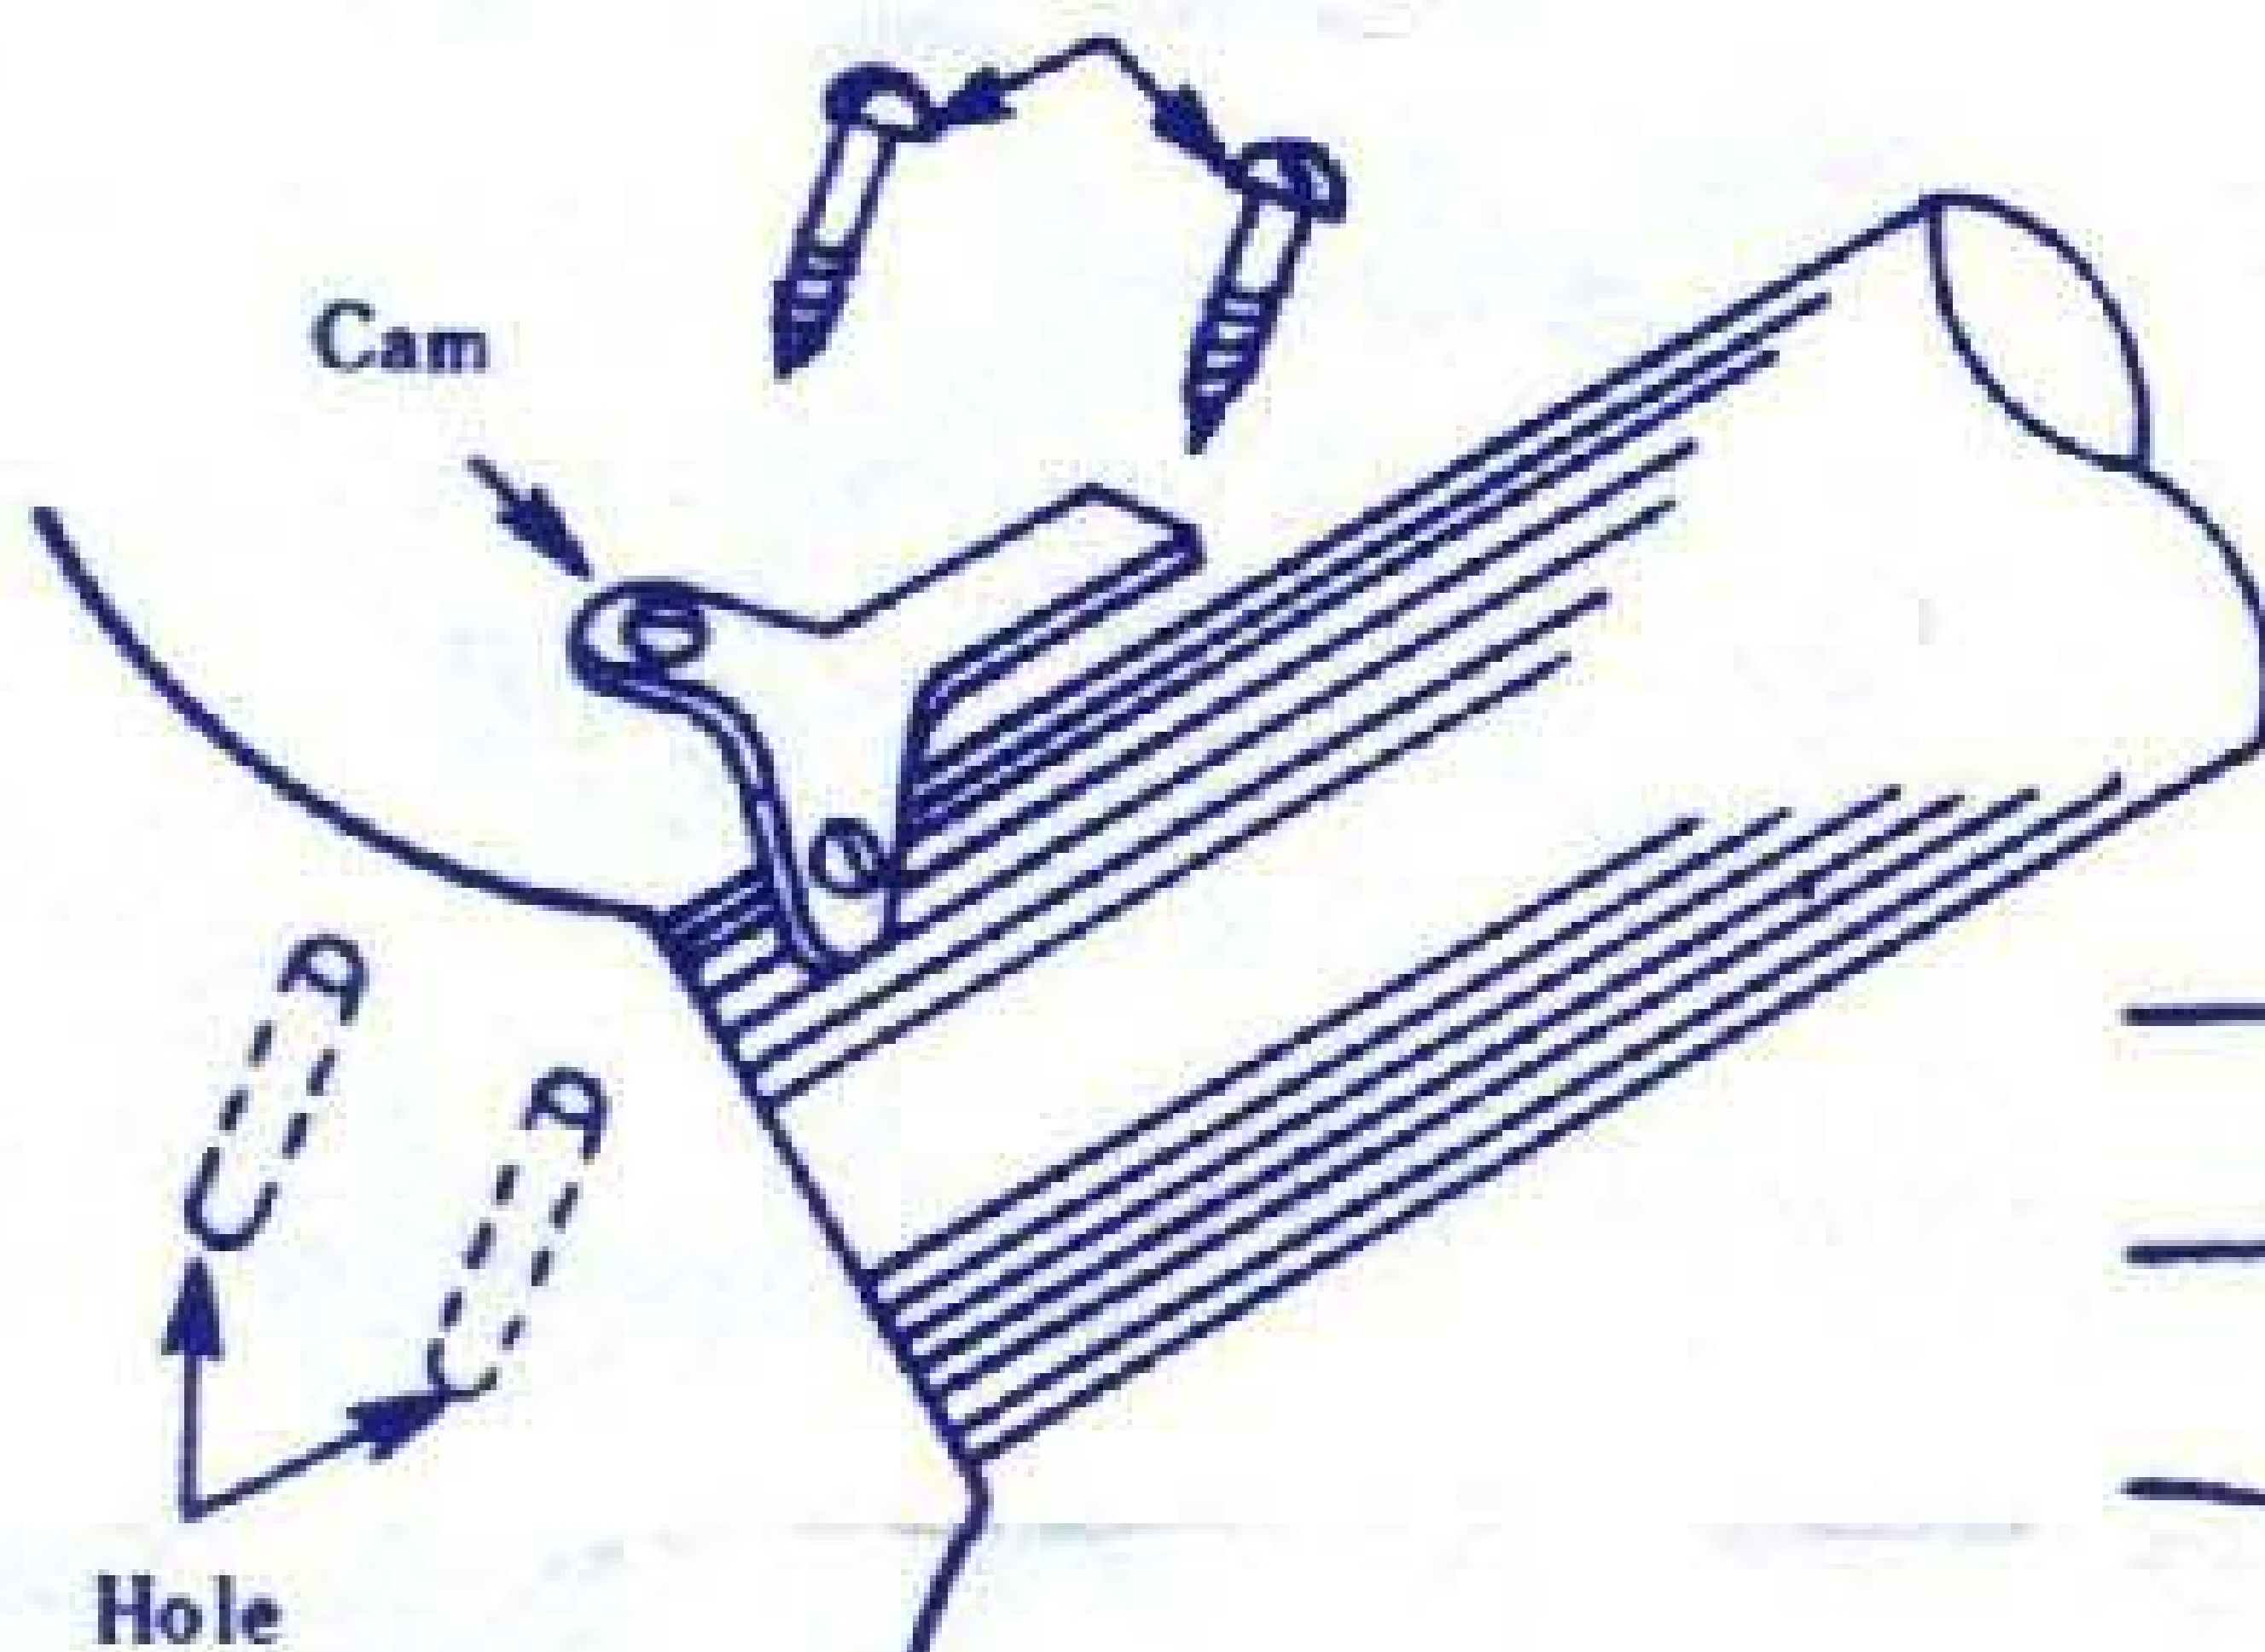

Hole


Make hole on the under point of the handle wheel and install cam like the right drawing.

Automatic Returning Equipment  
when the car has turned, and the handle wheel are out back, the lever returns by the action of cam.

Indicator

Cam

## Wiring

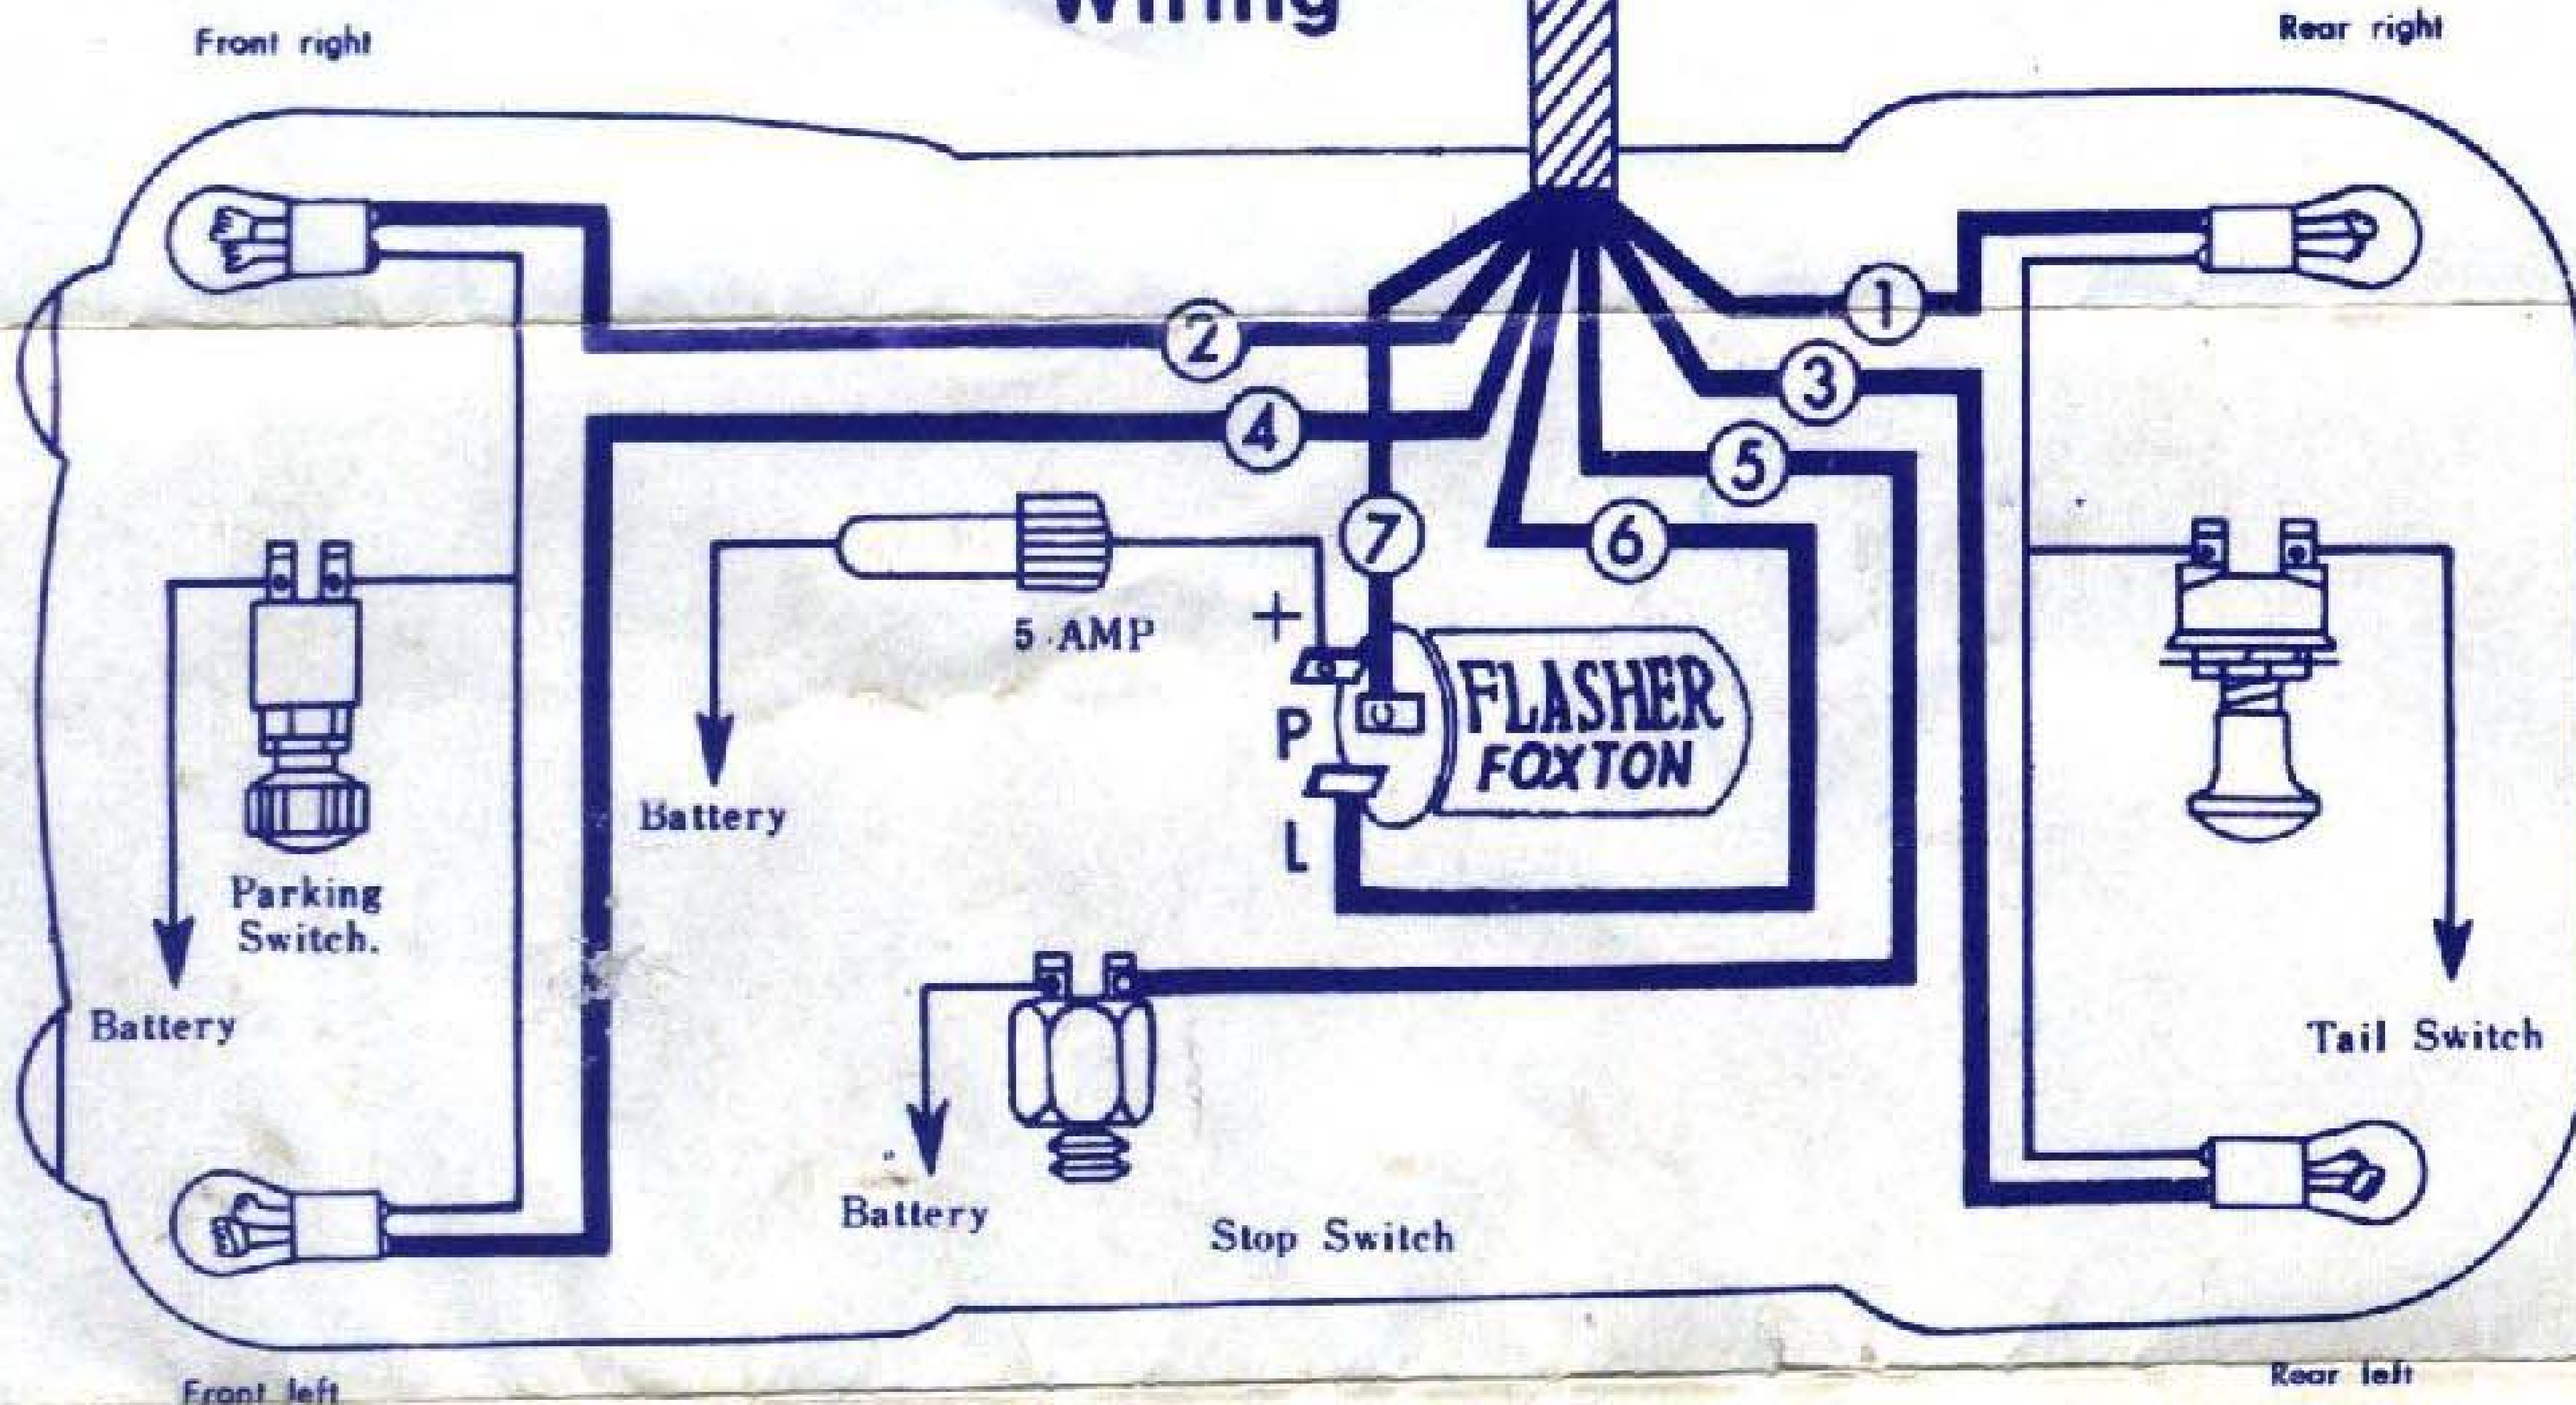

- Black — 1 — Right rear flasher lamp
- Sky Blue — 2 — Right front flasher lamp
- Dark Blue — 3 — Left front flasher lamp
- Cyan — 4 — Left rear flasher lamp

- Orange — 5 — Stop Switch
- Red — 6 — Flasher L terminal
- yellow — 7 — Flasher p terminal

as each cord can be distiguisable by color, the wiring should be mao: according to the above drawing

\*Notice: Cam is not eed to install for non cancelling Switch.